



User manual

## EliteTouch table High school 43"

More info

[edu.techsavers.com](https://edu.techsavers.com)

# MANUAL

<b>Intro</b>	<b>2</b>
<b>Technical specifications</b>	<b>3</b>
Display	3
System	3
Touch technology	3
Connectivity	3
Other features	3
Power consumption	3
Package contents	3
<b>Assembly and installation</b>	<b>4</b>
<b>Using the device</b>	<b>4</b>
<b>Maintenance and safety features</b>	<b>4</b>
<b>Troubleshooting common problems</b>	<b>5</b>
<b>Warranty and service</b>	<b>5</b>
<b>Contact</b>	<b>5</b>





## INTRODUCTION

The EliteTouch table High school 43" is an interactive touch table ideal for teamwork, presentations, or visualizations in schools, showrooms, or public spaces. It runs on Android 14, features 4 GB of RAM, and has 32 GB of internal memory.





# TECHNICAL SPECIFICATIONS

## Display

Size	43"
Type	TFT-LCD (Panel Supplier: BOE/LG/AUO)
Ration	16:9
Active surface	945,4 × 535,5 mm
Resolution	3840 × 2160 (4K UHD)
Brightness	350 cd/m <sup>2</sup>
Contrast	1500:1
Reaction time	16 ms
Viewing angle	178° both horizontal and vertical

## System

Procesor	8-core Cortex A55, 1,2 GHz
OS	Android 14
RAM	4 GB
Internal memory (ROM)	32 GB
Multiple language	Yes

## Touch technology

Type	Captive touch panel
Touch points	20
Reaction time	0,5 sec

## Connectivity

USB-A	3 ks
USB-C (Full-Link)	1 ks
Ethernet (RJ45)	1 ks
HDMI IN	1 ks
USB Touch	1 ks

## Other features

Metal frame with powder coating
Tempered glass for diplay protection
Built in stereo speaker 2 × 15 W
Built in fan
Built in reset button

## Power consumption

Operating mode	170 W
Stand-by mode	≤ 3 W

## Dimension and weight

1290 × 760 × 850 mm
Netto: 61 kg
Brutto: 70 kg

Package contents: EliteTouch table High school 43", Power cable, HDMI cable and/or USB touch cable, User manual



## ASSEMBLY AND INSTALLATION

- Place the touch table on a stable surface with sufficient load capacity.
- Ensure free access to the ports for easy connection.
- Ensure adequate ventilation; a fan is built into the device.
- Connect the power cable to an electrical outlet.
- Connect external devices using HDMI, USB, or Ethernet as needed.
- Turn on the device using the power button or the remote control.

## DEVICE USAGE

- The touch table supports 20-point multitouch, which enables easy and precise work for multiple users simultaneously.
- After the first startup, set the language, WiFi network, and Google account if necessary. Use applications designed for Android 14 to maximize the use of the device's features.
- Adjust the volume and sound settings as needed via the Android system menu.

## MAINTENANCE AND SAFETY INSTRUCTIONS

- Clean the display with a soft, dry, or slightly damp cloth. Do not use aggressive cleaning agents or solvents.
- Protect the device from direct sunlight and extreme temperature conditions.
- Ensure that the fan has sufficient space for the required ventilation.
- Prevent the device from coming into contact with liquids and avoid physical damage.



## TROUBLESHOOTING COMMON PROBLEMS

Problem	Most likely fault	How to resolve
Touch screen	Dirt on display or system failure	Clean the display, restart device
Device wont start	Power shortage or failure	Check the power cable and the connection to the electricity supply
No sound	Sound settings or speaker	Check the volume settings and the connection
The device is slow	Lack of free memory	Close unused applications, restart

## WARRANTY AND SERVICE

- The device is covered by a warranty in accordance with the terms and conditions of MB Tech BB s.r.o.
- In case of a need for service or a warranty claim, contact an authorized service center or your dealer.

## CONTACT

**MB Tech BB s.r.o.**

reklamacie@mbtech.sk  
www.mbtech.sk/en

